Coolant Fill/Dearation Tank Kits A041G001 and A041G006

COOLANT TANK KIT CONTENTS



FIGURE 1. INSTALLATION PARTS

1. Apply thread sealant to all threads of all fittings.



FIGURE 2. APPLY THREAD SEALANT

COOLANT TANK ASSEMBLY

2. Install two hose barbs and plug.





FIGURE 3. FITTING INSTALLATION

ENGINE AIRVENT ADAPTATION

3. For HDKBL, HDKBM, and HDKBN models remove pipe plug in thermostat housing and install adapter first, then hose barb.

For HDKBP. HDKBR, and HDKBV models remove pipe plug in generator tank and install hose barb.





FIGURE 4. HDKBL, HDKBM, AND HDKBN MODELS

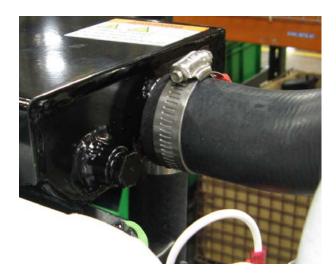




FIGURE 5. HDKBP, HDKBR, AND HDKBV MODELS

COOLANT TANK TEE CONNECTION

- 4. Apply thread sealant to all fittings.
- 5. Install tee in radiator to generator set hose and coolant tank to radiator/generator set hose.









FIGURE 7. HDKBP, HDKBR, AND HDKBV MODELS

FIGURE 6. HDKBL, HDKBM, AND HDKBN MODELS

